




SEPLUS HITEN LITHIUM ION BATTERY PACK SPECIFICATION

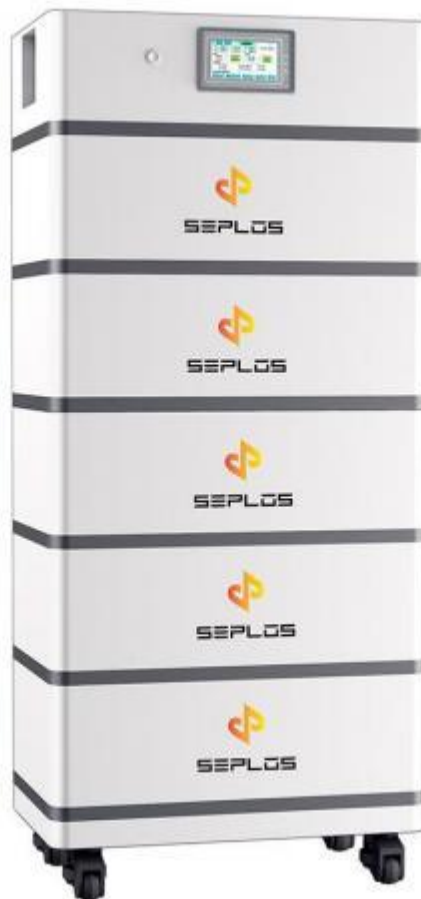

DONGGUAN SEPLUS TECHNOLOGY CO., LTD

CONTENT

1. Introduction	3
2. Functions	3
3. Specifications	4
3.1 Appearance and interface	4
3.2 Diagram	5
3.3 Parameters	6
3.4 Protection parameters	7
4. Communication	10
4.1 Interface definition.....	10
4.2 Interface definition.....	10
4.3 RS232 communication	12
4.4 Coding	12
5. Working mode	13
5.1 Charging mode	13
5.2 Discharging mode	13
5.3 Standby mode	13
5.4 Power off mode	13
5.4.1 Power off	13
5.4.2 Awaken	14
6. Installation	14
6.1 Package list	14
6.2 Accessories list	15
6.3 Installation	16
7. Package	18
8. Safety precautions.....	19

1. Introduction

This battery pack System, is applicable both for residential and commercial energy storage system, which is assembled with 3.2V 55Ah lithium iron phosphate cell in 32S1P configuration, and accompany with SEPLOS Smart BMS. Each pack support **5 packs in parallel** to easily expand capacity. The pack can not connected in series. **And do not mix parallel the battery packs of different brands or models.**

2. Functions

2.1 Reliable charge-discharge

With high reliability and long cycle life by high efficiency in charge and discharge.

2.2 Self-protection

Working in perfect protection, precise data sampling and rapid response.

2.3 Over voltage and low voltage protection of battery pack or individual cell.

2.3 Over current protecting during charge/discharge

2.4 Over temperature protecting during charge/discharge

2.5 Short circuit protection

2.6 Resetting protection

The voltage and current will be back to initial value if the battery pack or individual is over charge or over current.

2.7 Equalization

Equalized control each battery according to its voltage and **passive discharge**.

2.8 Operating events recording

2.9 PC software monitor

Can reset the parameter including the protected parameter of **overcharge**, **over discharge**, **over current**, high or low temperature and the parameter of capacity, working mode, equalization and storage etc by PC software.


2.10 RS485 and RS232 communication with LCD screen monitor display.


2.11 CAN communication

Isolated Communication adopting, and will support address coding or address dial automatically.


3. Specifications

3.1 Appearance and interface

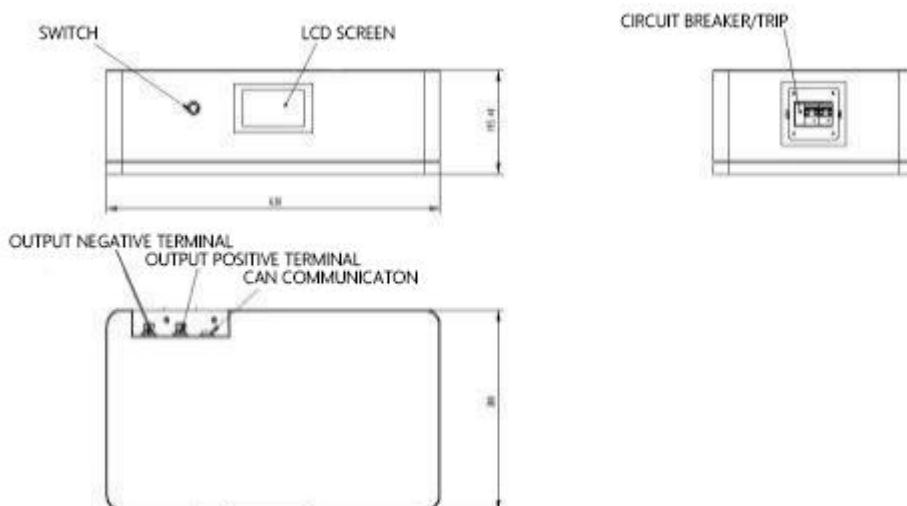

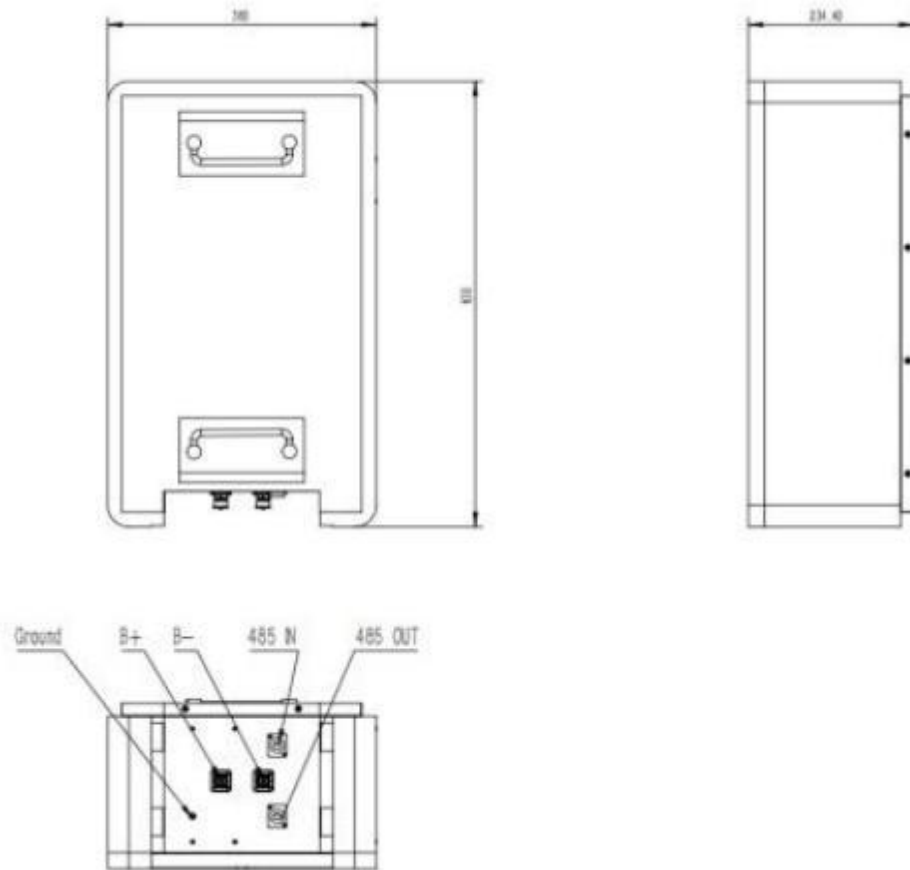

3.2 Diagram

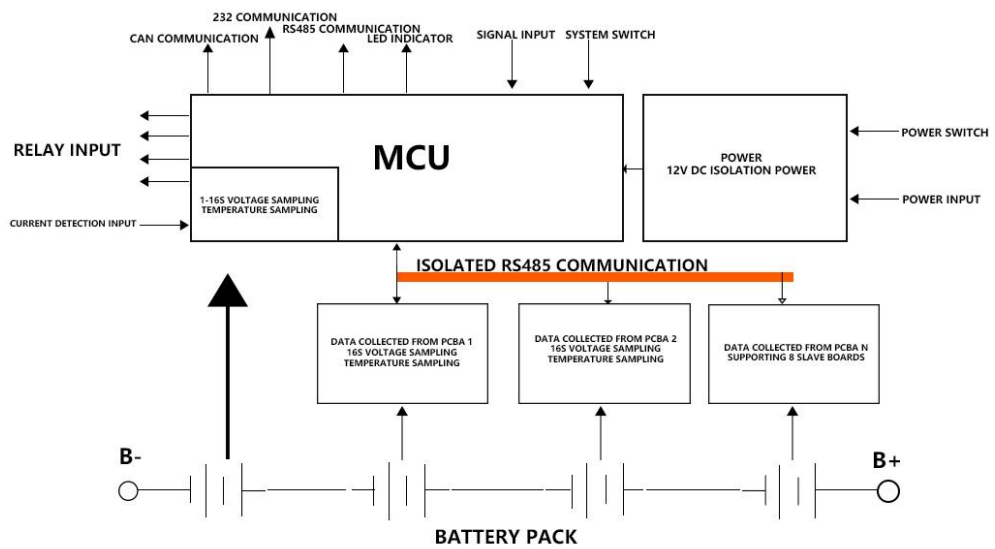

3.3 Parameters HV Battery

Items	HV-AC-S1	HV-AC-S2	HV-AC-S3	HV-AC-S4	HV-AC-S5
Rated energy(kWh)	5.6KWh	11.2KWh	16.8KWh	22.4KWh	28KWh
Configuration	32S1P	2*32S1P	3*32S1P	4*32S1P	5*32S1P
Nominal Voltage(V)	102.4V	204.8V	307.2V	409.6V	512V
Working Voltage(V)	86.4V- 116.8V	172.8V-233.6V	259.2-350.4V	345.6-467.2V	432-584V
Rated charge/ discharge power(KW)	5.12KW	10.24KW	15.36KW	20.48KW	25.6KW
Cell chemistry	Lithium Iron Phosphate				
Nominal Capacity(Ah)	55Ah				
Rated charge/ discharge Current(A)	50A				
Communication Interface	CAN/ RS485				
Cycle life	5000 cycles				
Working Temperature	- 15-45(°C)				
Humidity(%)	5%-65%				
Altitude Limited(m)	2000m				
Weight(Kg)	73± 2KG	121±4KG	169± 6KG	217±8KG	265± 10KG
Dimension(mm)	630*380*550 mm	480*450*766 mm	680*500*982 mm	680*500*1198 mm	710*220*1414 mm

131.670

165.456

3.4 Protection parameters


NO.	Items		Initial	Settable	Remark
1	Individual over charge protection	Warning voltage	3550mV	Yes	
		Protecting voltage	3600mV	Yes	
		Delaying time	1.0S	Yes	
	Recovery	Recovery voltage	3380mV	Yes	
		Recovery capacity	SOC < 96%	Yes	
		Discharge recovery	Discharge current > 1.0A		
2	Individual over discharge protection	Warning voltage	2800mV	Yes	System will power off when over discharge protection over 30 seconds without recovery.
		Protecting voltage	2500mV	Yes	
		Delaying time	1.0S	Yes	
	Recovery	Recovery voltage	2900mV	Yes	
		Recovery when charging	With charger connecting		
3	Total over charge protection	Warning voltage	568V	Yes: cell*(total number in series)	
		Protecting voltage	576V	Yes: cell*(total number in series)	
		Delaying time	1.0S	Yes	
	Recovery	Recovery voltage	540.8V	Yes: cell*(total number in series)	
		Recovery capacity	SOC < 96%	Yes	
		Discharge recovery	Discharge current > 1.0A		
4	Total over discharge protection	Warning voltage	448V	Yes: cell*(total number in series)	System will power off when over discharge protection over 30 seconds without recovery.
		Protecting voltage	400V	Yes: cell*(total number in series)	
		Delaying time	1.0S	Yes	
	Recovery	Recovery voltage	464V	Yes	
		Recovery when charging	With charger connecting		
5	Over current protection	Warning current	55A		No self-recovery
		Protecting current	60A		

	(charging)	Delaying time	5.0S		if this status had been locked with continuously occurrence in 10 times.
	Recovery	Self- recovery	Self- recovery after 1 min		
		Discharge recovery	Discharge current >1.0A		
7	First grade over current protection(discharging)	Warning current	55A		No self- recovery if this status had been locked with continuously occurrence in 10 times.
		Protecting current	60A		
		Delaying time	5.0S		
	Recovery	Self- recovery	Self- recovery after 1 min		
		Discharge recovery	Charge current >1.0A		
8	Second grade over current protection(discharging)	Protecting current	≥90A		No self- recovery if this status had been locked with continuously occurrence in 10 times.
		Delaying time	500mS		
	Recovery	Self- recovery	Self- recovery after 1 min		
		Discharge recovery	Charge current >1.0A		
9	Cell temperature protection	Low temperature warning(charging)	2°C		
		Low temperature protecting(charging)	0°C		
		Low temperature protecting recovery(charging)	5°C	Yes	
		High temperature warning(charging)	50°C	Yes	
		High temperature protecting(charging)	55°C	Yes	
		High temperature protecting recovery(charging)	50°C	Yes	
		Low temperature warning(discharging)	-15°C	Yes	


		Low temperature protecting(discharging)	-20°C	Yes	
		Low temperature protecting recovery(discharging)	-15°C	Yes	
		High temperature warning(discharging)	55°C	Yes	
		High temperature protecting(discharging)	60°C	Yes	
		High temperature protecting recovery(discharging)	55°C	Yes	
10	Ambient temperature warning	Low temperature	-20°C	Yes	
		High temperature	65°C	Yes	
11	Power consumption	Working current	≤ 50mA (Relay current not included)		
		Power off	\		
12	Fan control	On	NC		
		Off	NC		
13	Equalization	Threshold voltage	3400mV	Yes	
		Voltage difference	30mV	Yes	
14	Capacity setting	Low power warning	SOC < 5%	Yes	No warning when charging
15	Cell failure protection	Voltage difference	> 1V	NO	charge- discharge disable
16	Full charge identify	Voltage	> 560V	Yes: 3.5V*(total number in series)	Stop charging when both conditions is satisfied and refresh the SOC to 100%
		Cutoff current	< 1A	Yes	

4. Communication

4.1 Interface definition

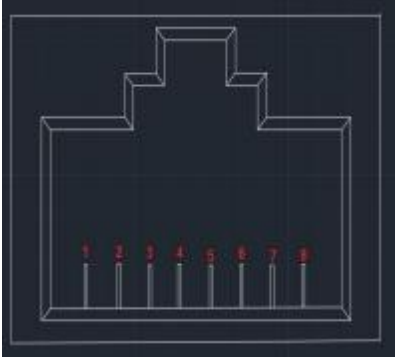	1	RS485A
	2	RS485B
	3	5V
	4	GND
	5	UP- IN+
	6	UP- IN-
	7	NC
	8	NC

485 IN port : connect to master control or upper slave control

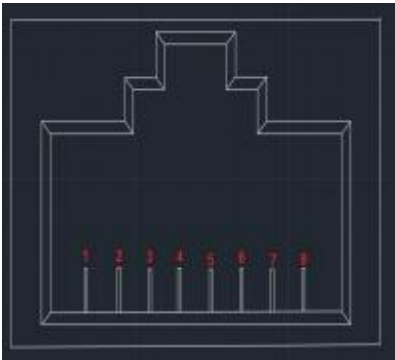
	1	RS485A
	2	RS485B
	3	5V
	4	GND
	5	UP- IN-OP+
	6	UP- IN-OP-
	7	NC
	8	NC

485 OUT port : connect to lower slave control


4.2 Interface definition

The battery pack supports CAN communication with inverters at the **baud rate of 500K**. The CAN communication interface applied 8C8P Ethernet port. The battery pack can transmit information with inverter or **CAN TEST equipment through the CAN interface**. **The paralleled packs**

transmit information through RS485 interface, and then, the master pack gathering the system information, and transmit to inverter and PCS through CAN communication.

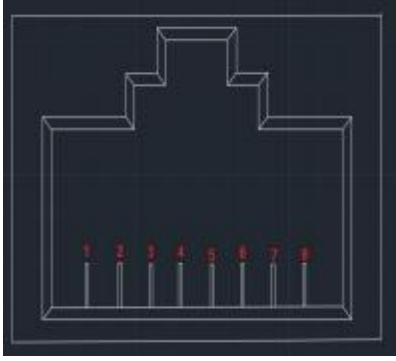	1	RS485A
	2	RS485B
	3	5V
	4	GND
	5	UP- IN+
	6	UP- IN-
	7	NC
	8	NC


485 Interface : connect to lower slave control

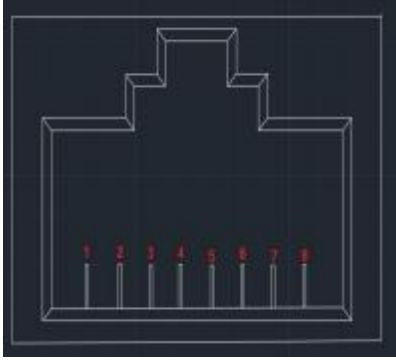	1	RS232-TX
	2	RS232- RX
	3	RS232-GND
	4	RS485A
	5	RS485B
	6	CAN- H
	7	CAN- L
	8	NC

CAN Interface : connect to upper inverter or PC


4.3 RS232 communication

BMS can connect to PC through RS232 interface, which can browse all the information of the battery including voltage, current, temperature, status, SOC, SOH and manufacture in PC software at the default baud rate of 9600bps, same as RS485 interface.

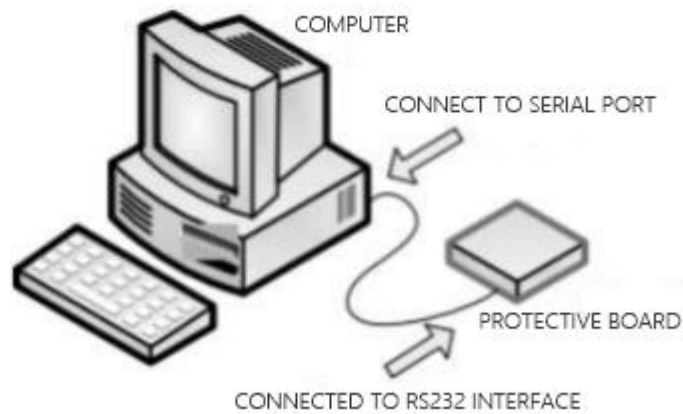

4.4 Coding

The system will be coding automatically when battery module in series with slave communicating or in parallel with host communicating. The slave code can coded by software according to order of connection, the way to the host, show as below:

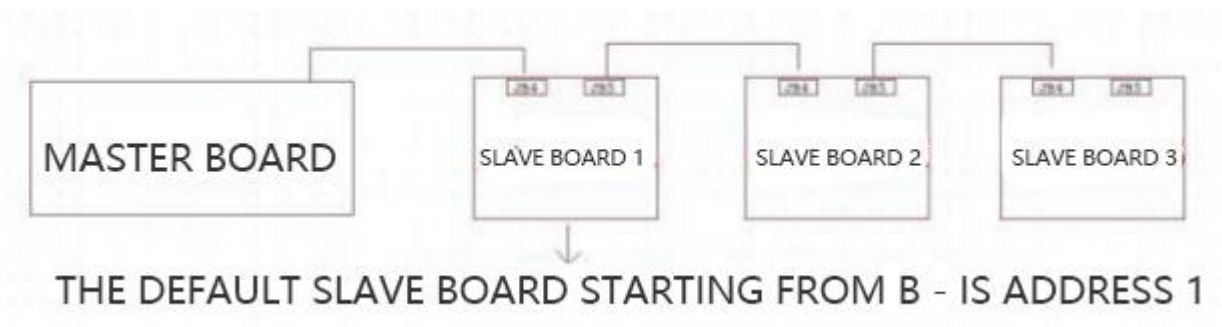

5. Working mode

5.1 Charging mode

When a charger was detected, and the charger voltage is 0.5V+ more than the battery voltage, BMS will turn on the charging MOSFET. And when the charging current reaches the effective charging current value, enters charging mode.

5.2 Discharging mode

When a loads was detected, and the discharging current reaches the effective charging current value, BMS enters discharging mode.

5.3 Standby mode

When the BMS not in charging mode, nor discharging mode, it enters standby mode.

5.4 Power off mode

5.4.1 Power off

When **meet any condition as below**, the system will be power off (without charger only)

- 1) **Individual or entirety battery remain over discharge protecting** mode within 30 seconds.
- 2) **Press the button in 3 seconds**. (make sure no charger connected, otherwise it will not enter low power mode.)



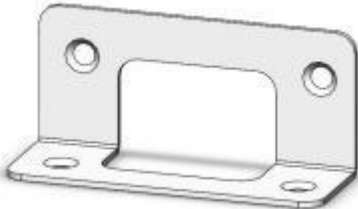

5.4.2 Awaken

When meet any condition as below, the system will be enter working mode





- 1) **Connect the charger** and the **voltage need reach more than 300V.**
- 2) Press the power button in 3 seconds to start the system.

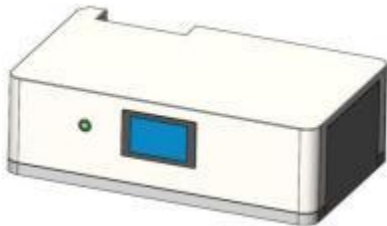6. Installation

6.1 Package list

NO.	Item	Quantity	Photo
1	Battery Box	1 PCS	
2	Base	1pcs	
3	Bracket-B	1pcs	
4	Bracket-C	1pcs	

6.2 Accessories list

NO.	Item	Quantity	Photo
1	Truckle	4PCS	
2	Battery cable (Battery to battery)	Depend on quantity of battery box	
3	Ground lead	Depend on quantity of battery box	
4	RJ45 cable, yellow 300mm		
5	1.5m Battery cable (Battery to inverter)	1pcs	
6	1.5m Network wire	1pcs	
5	Expansion screw	2pcs	

6.3 Installation

6.3.1 Check the battery status before installation


Confirm it is good shape and perfect port of the item



6.4 Installation



6.4.1 Check the battery status before installation

Confirm it is good shape and perfect port of the item

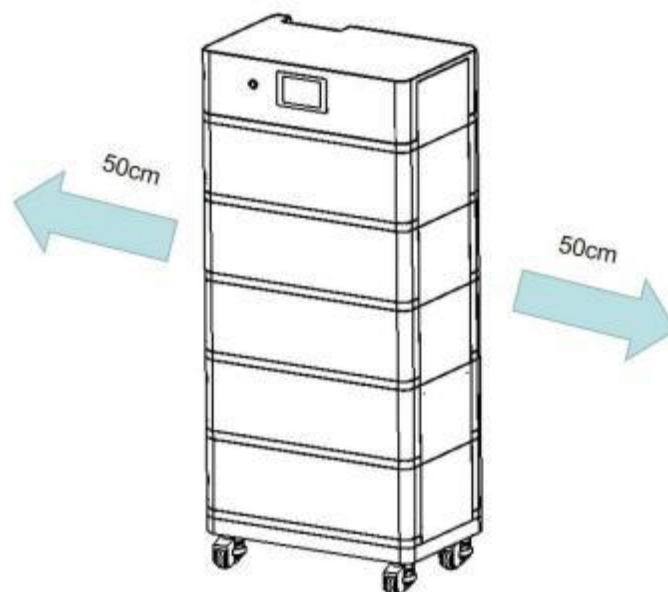

6.3.3 Connection

- 1) Before connecting , the battery should be powered off and keep the circuit breaker at 'OFF' status.

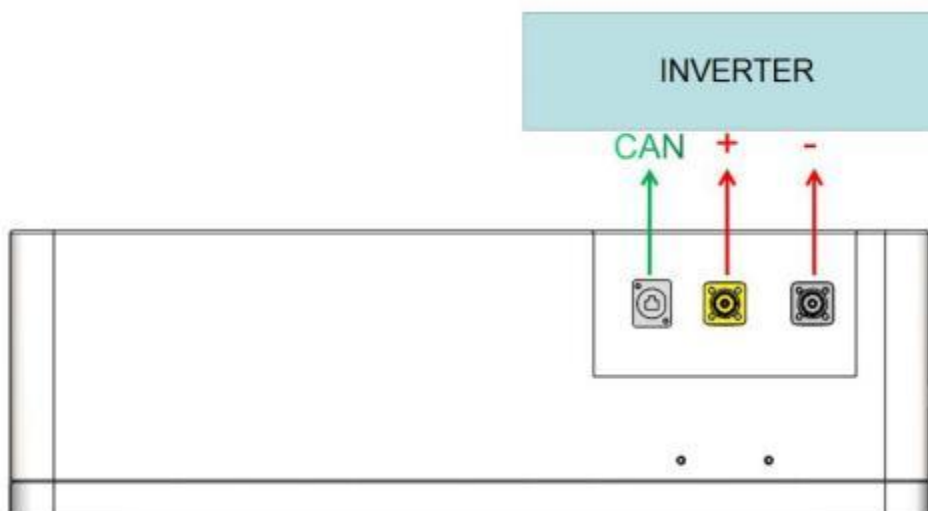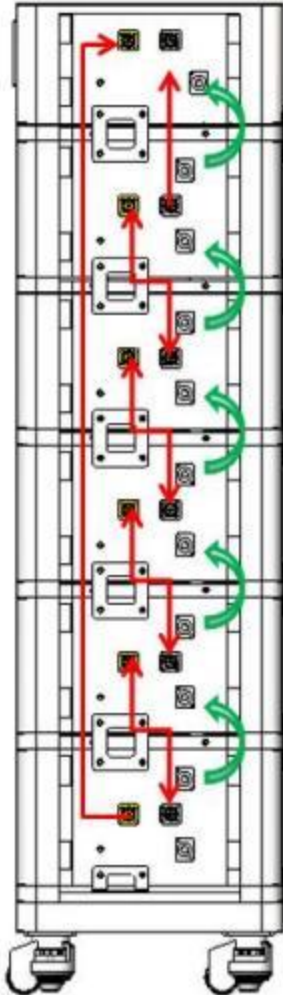

2) Power on, check if the battery is normal on the detecting screen



3) Select the corresponding battery and the protocol

4) Turn on the circuit breaker

7. Package

Battery box size: L 0.7m*W0.45m*H 0.31m Weight: 58kg

Management box size: L 0.7m*W0.45m*H 0.31m Weight: 25kg

Accessory box size: L0.4m*W0.45m*H 0.31m Weight: 10kg



8. Safety precautions

- Do not use the pack if there' s any **deformation**. [Biến dạng](#)
- Do not **stack up** the battery. [Xếp chồng](#)
- Please be notice **the polarity of the battery and port**. [Kiểm tra cực và cổng kết nối](#)
- Make sure the **insulation of equipment**, use the tool and instrument correctly. [Kiểm tra cách điện, cách nhiệt](#)
- The **installation site** should **stay away** from **fire** and **Inflammable**, keep **ventilating** and dry. [Thông thoáng và khô ráo](#)
- **Do not disconnect the battery terminals when its running**.
- Not allow **non-technology staff** to **open all of function module**.
- Please **fully charge a new battery pack**, or a **long-time-no-use** battery pack with a **designed charger**. [Hãng gửi hay Inverter?](#)
- Do not **uninstall,open, extrude, bend, impale or break** the battery.
- Do not **refit** the battery or connect to other object, do not **immerse** the battery into any water, sea water, or drinks and other liquids.stay away from **fire, explosive material or other dangerous item**.
- Do not allow the **battery short circuit**, do not **any metal or conductor contact the terminal**.
- **Do not let the battery fall**. if does, especially on the **solid surface**, please contact the **service center**.
- If there is any signs of Electrolyte leakage, do not let it get any direct contact with your bare skin or eyes. If it happened, use plenty of

water to clean up or ask doctor for help.

- Do not uninstall the battery cell, or there will cause internal short even fire disaster or other issue.
- Do not burn the battery or throw it to the fire, otherwise, there will be cause the fire of the battery.